


Hearse Bed Layout

Front of Car

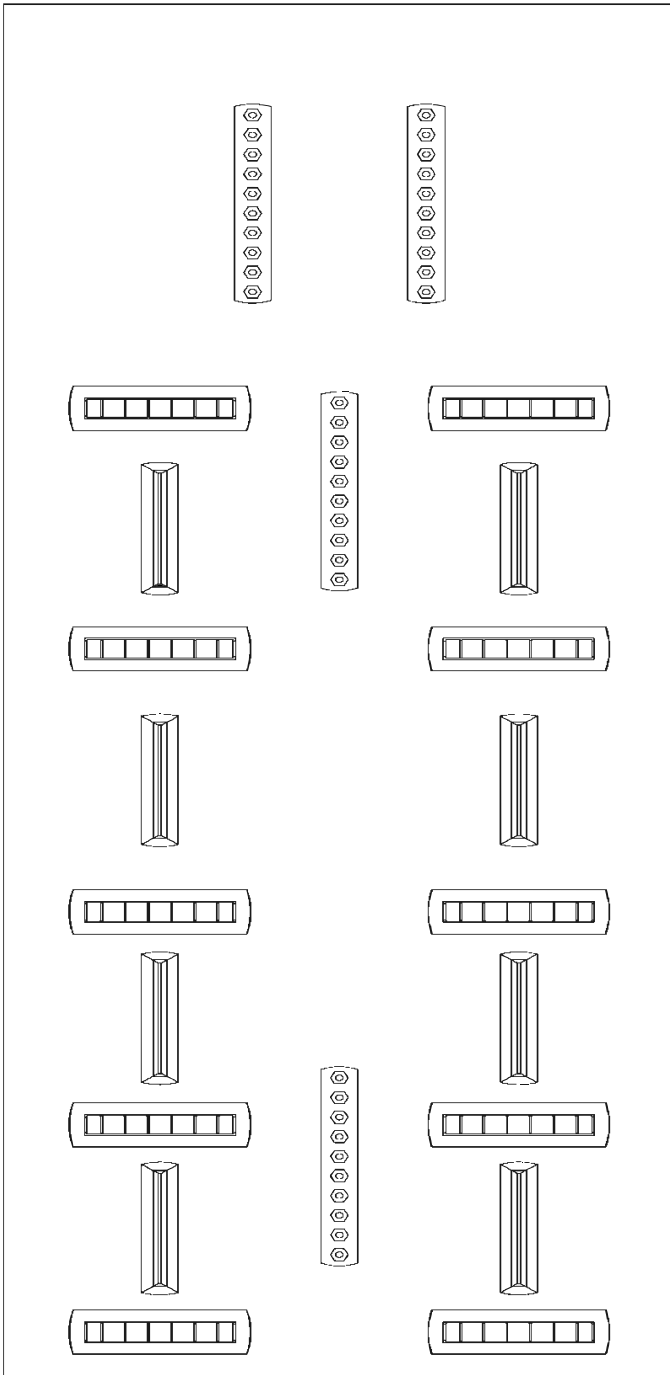

Quantity	Part Number	Description
10	10103	DNR Roller Frame Assembly (Required slots in the floor are 2" x 10.75")
8	20106	DNR Skid Bar (No slots required – surface mounted)
4	20103	DNR 10 Hole Plate (Required slots in the floor are 1" x 17")
2	40102	½" Stationary Bier Pin (Placed in the two 10 Hole Plates at the front of the car to hold the casket)
1	40101	½" Adjustable Bier Pin (Placed into the 10 Hole Plate at the back of the car to hold the casket)
1	20107	DNR 1 Hole Plate (Used to store the adjustable bier pin when not in use)

All the floor hardware have mounting holes. We suggest using #10 stainless steel oval head screws (not included with the hardware).

This is a typical layout in a hearse. You may alter the layout and hardware combinations to suit your particular installation. Please call us to discuss your requirements.